Manualslib.com - The Global Manuals Library

SHARP 21L-FG1BV OPERATION MANUAL

Table of Contents

operation manual
part names
remote control
channel selection
installing batteries in the remote control unit
adjusting volume
auto channel tuning
channel setting
manual channel tuning
picture adjustment
off timer
sound adjustment
useful features
blue screen
channel recall
check list
surround sound
Other ManualsLib Projects

SHARP®

COLOUR TELEVISION

21L-FG1BV
21L-FG1SV

OPERATION MANUAL

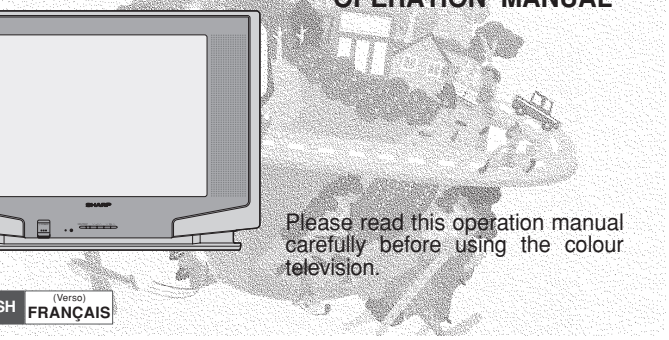

Please read this operation manual carefully before using the colour television.

SH (Verso) FRANÇAIS

tents

AFETY ECAUTIONS]

CCESSORIES]

NTENNA NNECTION]

onnecting to an tenna

onnecting to an tenna via a VCR

ONNECTING TO HER UIPMENTS]

ART NAMES]

/ set

emote control

stalling batteries in the mote control unit

E6 [BASIC OPERATION]
- Turn on the power
- On-screen display language selection
- Channel selection
- Adjusting volume

E7 [PRESETTING CHANNELS]
- Auto channel tuning
- Manual channel tuning

E8 [SETTING AND ADJUSTMENT]
- Channel setting
- Picture adjustment
- Sound adjustment

E9 [TIMER SETTING]
- Off timer
- On timer
- Reminder on-screen timer

E10 [FEATURES]
- Blue screen

E11 [USEFUL FEATURES]
- Channel/Timer display
- Mute
- Channel recall
- TV/Video selection
- Surround sound

E12 [TROUBLESHOOTING]

E13 [SPECIFICATIONS]

TINS-C750WJZZ⚠
06P10-MSP

E1 SAFETY PRECAUTIONS

Damage

Turn off the power and unplug the power cord from the wall outlet immediately if the TV set begins to make any unusual noises or gives off smoke or an unusual smell. Then call your dealer for service.

Servicing

To reduce the risk of electric shock, do not remove the back of the cabinet. This TV set contains dangerous voltage.

Unstable surface and shocks

Do not place this TV set on an unstable cart, stand, shelf, or table. The TV set may fall, causing serious injury to a child or adult, and serious damage to the set. Sharp recommends securing the TV set to a stable surface or wall to prevent the set from falling due to sudden shocks or impact.

Power-cord protection

To prevent electrical shock, do not subject the AC power cord to damage by bending or twisting it, or by placing heavy items on top of it and do not place the AC power cord under the TV set. If the AC power cord becomes damaged, unplug it from the wall outlet immediately and call your dealer for service.

Moisture

To prevent electrical shock, do not use the TV set in an excessively damp place.

Water



To prevent fire or electrical shock, do not place the TV set near a bathroom, swimming pool or other area where it may become wet.

Liquid entry

Do not place a flower vase or anything else containing liquid on the TV set, as liquid spilt on the TV set can cause electrical shock or failure.

Object entry

Never insert or drop any metallic or inflammable objects into the ventilation openings of the TV set, as this can cause fire, electrical shock, or electrical failure.

TV Set position

Do place the TV set onto an even stand, table or rack which size is bigger than the TV set.
If the TV set is put onto a smaller size or uneven stand, table or rack may cause the TV cabinet distort.
Do not put or insert anything between TV set and the stand, table or rack.

Uneven surface and excessive force

Television equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

Ventilation

Do not place this TV set in a confined area, such as on a bookshelf or in a built-in case. Leave adequate space behind the TV for proper ventilation.

Fire prevention

To prevent fire, never place any type of candle or naked flames on the top or near the TV set.

ACCESSORIES

g accessories are included with this television.

ote Control



Size-AA batteries

Operation manual

ANTENNA CONNECTION

ng to an antenna

Connecting to an antenna via a VCR

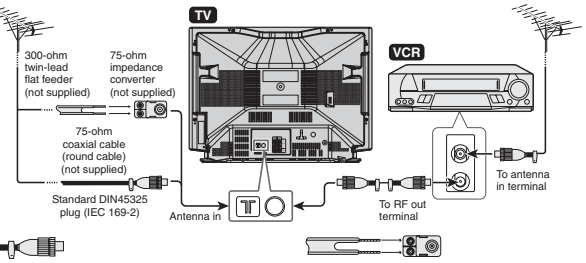

or antenna uses a 75-ohm coaxial standard DIN45325 plug (IEC 169-2), e antenna jack at the rear of the set.

If your outdoor antenna uses a 300-ohm twin-lead flat feeder, connect a 300-ohm to 75-ohm impedance converter and plug it into the antenna jack at the rear of the set.

CONNECTING TO OTHER EQUIPMENTS

back from a video disc player, VCR or other video equipment by connecting them to using the Audio/Video in terminals.

rear terminals usage

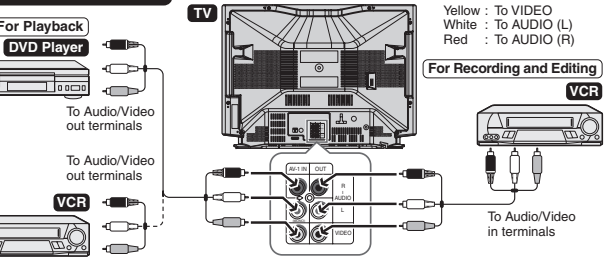

he RF terminal connection, set the TV to channel zero to make initial adjustments for the VCR.

E5 PART NAMES

TV set

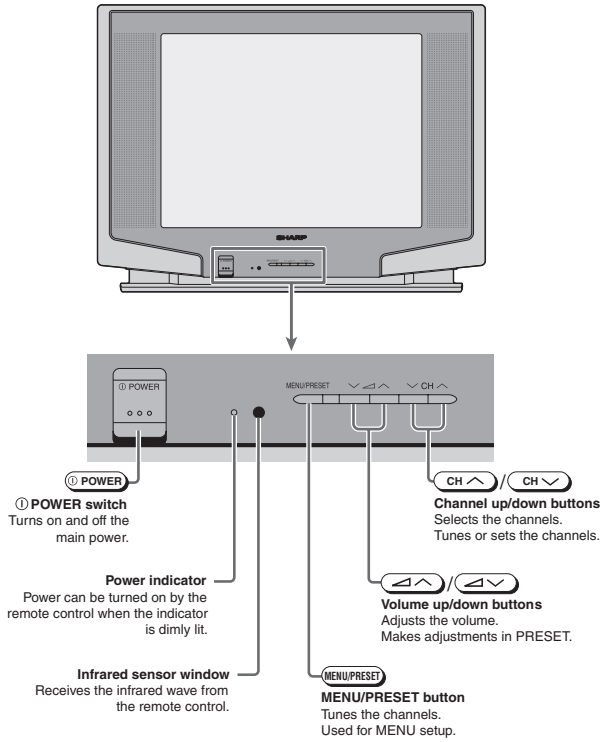

PART NAMES (Continued)

e control

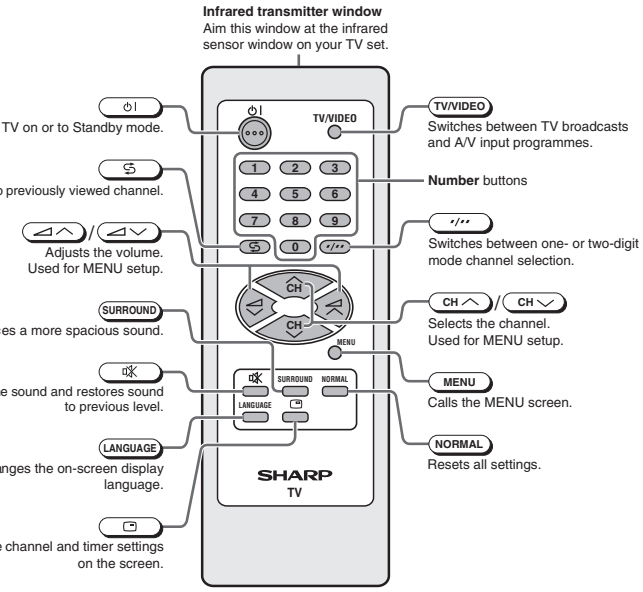
Infrared transmitter window
Aim this window at the infrared sensor window on your TV set.
TV on or to Standby mode.
TV/VIDEO
TV/VIDEO
Switches between TV broadcasts and A/V input programmes.
o previously viewed channel.
Number buttons
Adjusts the volume. Used for MENU setup.
Switches between one- or two-digit mode channel selection.
SURROUND
es a more spacious sound.
CH / CH
Selects the channel. Used for MENU setup.
MENU
e sound and restores sound to previous level.
MENU
Calls the MENU screen.
LANGUAGE
nges the on-screen display language.
NORMAL
Resets all settings.
e channel and timer settings on the screen.
SHARP
TV

ng batteries in the remote control unit

your thumbnail, pull the slit to open the y cover.



b Insert two batteries (size AA).



c Replace the battery cover.

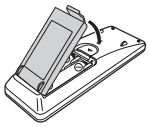

E6 BASIC OPERATION

Turn on the power

[TV Set]

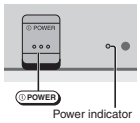

- When the power indicator is off, press POWER.
- When the power indicator lights up dimly, press ⏻ on the remote control. The power indicator changes to bright and a picture appears.

On-screen display language selection

Remote Control

- Press LANGUAGE to select desired language.
- Pressing LANGUAGE changes the language as shown below.

ENGLISH ⟶ 中 文 ⟶ FRANÇAIS ⟶ Tiếng Việt ⟶ BAHASA MELAYU



[TV Set]

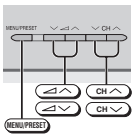

TV set

- Press MENU/PRESET for more than two seconds, the language select mode appear.
- Press CH ∧ / CH ∨ to select desired language.
- Pressing MENU/PRESET changes the screen as shown below.

Language ⟶ AUTO ⟶ MANUAL ⟶ Normal screen

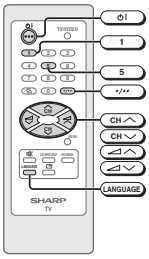

Channel selection

❶ Using CH ∧ / CH ∨

- Press CH ∧ and channels change as shown below.
  1 → 2 → ... → 98 → 99 → AV → 0 → 1 → 2 ...
- Press CH ∨ and channels change as shown below.
  1 → 0 → AV → 99 → 98 → ... → 2 → 1 → 0 ...

❷ With the number buttons (on remote control)

- To select a one-digit channel, such as 5, press 5.
  If "5-" is indicated, press -/-- to select one-digit input, and then press 5 again.
- To select a two-digit channel, such as 15, press -/-- to select the two-digit input. Press 1, and then press 5.

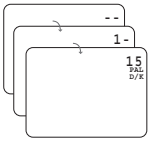

Adjusting volume

❶ Adjust volume using ◿ / ◿.

- The volume bar disappears approximately three seconds after the volume has been adjusted.



NOTE

- When the power indicator lights up dimly, either CH ∧ / CH ∨ on the TV can be pressed to turn on the power.
- Channels that have been skipped cannot be selected by CH ∧ / CH ∨.
- The AV input channel cannot be selected using CH ∧ / CH ∨ on the remote control. Use TV/VIDEO to select this channel.

26/12/06, 2:06 PM

PRESETTING CHANNELS

hannel tuning

ally tunes in and presets receivable TV stations.

ENU/PRESET) for more than two seconds.



ENU/PRESET) again to display AUTO mode screen.

g (MENU/PRESET) changes the screen as shown below.

⟶ AUTO ⟶ MANUAL ⟶ Normal screen

/ on TV set.

TV stations in your area that can be received by set are automatically preset between channels 1

reen shows whatever is on channel 1 when auto l preset is finished.



[TV Set]

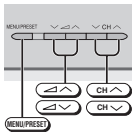

channel tuning

anual channel tuning to a desired TV station.

ENU/PRESET) for more than two seconds.

ENU/PRESET) twice to display MANUAL mode



g (MENU/PRESET) changes the screen as shown below.

⟶ AUTO ⟶ MANUAL ⟶ Normal screen

CH) / (CH) or number buttons to hannel position.

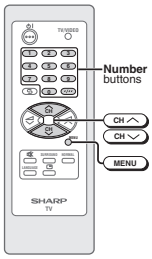

/ on TV set to locate channel you wish to preset to current l position.

is initiated and when a TV signal is received during the search, the search stops.

steps 3 and 4 above, to preset channel positions for other broadcasts.

ENU/PRESET) again to display normal screen.

TEM may not have been set correctly, if noise can be heard or if there is no sound. In such cases, adjust YSTEM using the (MENU) on the remote control.
ET stores all receivable channels including those which may be very weak and not clearly visible. To ose channels designated for the local viewing region, use MANUAL PRESET.

E8 SETTING AND ADJUSTMENT

Channel setting

Enables individual channel setting.

1 Press (MENU) to call MENU screen.

2 Press (CH) / (CH) to select "CH-SETTING".

3 Press / to display CH-SETTING menu.

4 Press (CH) / (CH) to select desired setting.

5 Each time you press / , setting for individual items change as follows:





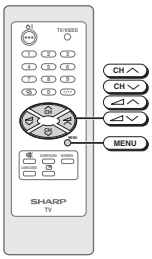

- **POSITION**
  The channel position changes to the higher or lower number.
- **COLOUR**
  ↱ AUTO ⟷ PAL ⟷ SECAM ⟷ N443 ↰
- **SOUND**
  ↱ B/G ⟷ I ⟷ D/K ↰
- **SKIP**
  ON ⟷ OFF
  Channel numbers with a "✤" mark on the left are set to SKIP. To turn off SKIP, press the number buttons to select the desired channel and then set "SKIP" to "OFF".
- **FINE**
  The frequency changes to allow fine tuning.
- **BOOSTER**
  Picture quality may improve in regions with weak signal strength using this function.
  ON② ⟷ ON① ⟷ OFF
  - If ON② is selected and the picture quality is still not good enough, please switch to ON①.
  - If signal strength is strong enough for the selected channel, the effect is negligible and may produce instability. In such case select "OFF".

6 Press (MENU) until normal screen appears.

- When you select AV for the channel position, the CH-SETTING menu changes as shown on the right and the colour mode changes in the following order:
  ↱ AUTO ⟷ PAL ⟷ SECAM ⟷ N443 ⟷ N358 ↰



NOTE

- Switching COLOUR system:
  Set the system to "AUTO" for normal TV reception. The AUTO mode automatically detects the receiving signal system and changes the reception system of the TV set. When the picture is not stable, switching to an appropriate system may improve the picture quality.
- When using FINE, the channel number changes from green to yellow.

SETTING AND ADJUSTMENT (Continued)

adjustment

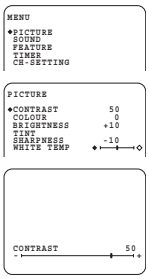

MENU) to call MENU screen.
CH) / (CH) to select "PICTURE".
) / ( ) to display PICTURE menu.
CH) / (CH) to select adjustment items.
using ( ) / ( ).
approximately three seconds to return to PICTURE menu.
steps 4 and 5 above to adjust other items.
MENU) until normal screen appears.
able lists the adjustment items shown in the PICTURE menu and how they
press ( ) / ( ).

Press ( )		Press ( )
To decrease contrast		To increase contrast
For less colour intensity		For more colour intensity
For less brightness		For more brightness
To move tint toward red		To move tint toward green
For less sharpness		For more sharpness
To more reddish background		To more bluish background

be selected and adjusted when receiving NTSC broadcasts. (AV only)
can only be adjusted on PICTURE menu.

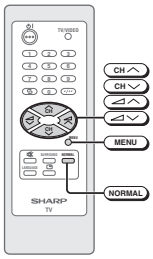

adjustment

MENU) to call MENU screen.
CH) / (CH) to select "SOUND".
) / ( ) to display SOUND menu.
CH) / (CH) to select adjustment items.
using ( ) / ( ).
approximately three seconds to return to SOUND menu.
steps 4 and 5 above to adjust other items.
MENU) until normal screen appears.
able lists the adjustment items shown in the SOUND menu and how they
press ( ) / ( ).

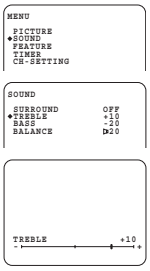

Press ( )		Press ( )
	ON → ON → OFF	
To decrease treble		To increase treble
To decrease bass		To increase bass
To shift balance toward left		To shift balance toward right

UND is set to "ON" or "ON", BALANCE cannot be selected.
s adjusted and not in centre (0), SURROUND cannot be selected.

MAL) while a PICTURE/SOUND selection is displayed, only the selected mode is reset to the standard
g) position.
MAL) while a PICTURE/SOUND menu screen is displayed will reset all the item of PICTURE/SOUND
tandard (factory-setting) position.

E9 TIMER SETTING

Off timer

Automatically turns power off after a set length of time has passed.

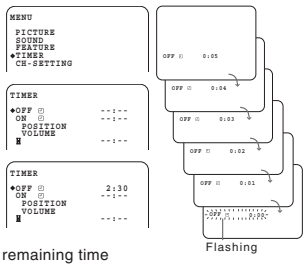

1. **Press (MENU) to call MENU screen.**
2. **Press (CH) / (CH) to select "TIMER".**
3. **Press ( ) / ( ) to display TIMER menu.**
4. **Press (CH) / (CH) to select "OFF ".**
5. **Press ( ) / ( ) to set time for TV to turn off.**
   - Maximum time that can be preset is 12 hours and 50 minutes. Timer start to count down after setting.
6. **Press (MENU) until normal screen appears.**
   - Five minutes before the preset length of time expires, the remaining time appears on the screen.
   - A flashing display of the remaining time appears during the last few seconds. When the preset length of time has passed, the TV set enters the Standby mode.

On timer

Automatically turns power on after a set length of time has passed.

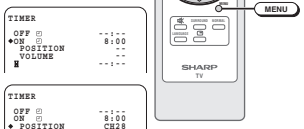

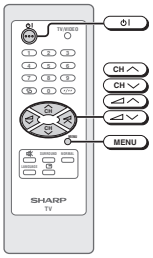

1. **Repeat step 1 to 3 of OFF TIMER.**
2. **Press (CH) / (CH) to select "ON ".**
3. **Press ( ) / ( ) to set time for TV to turn on.**
   - Maximum time that can be preset is 12 hours and 50 minutes. Timer start to count down after setting.
4. **Press (CH) / (CH) to select "POSITION".**
5. **Press ( ) / ( ) to set the channel.**
6. **Repeat step 4 to 5 above to select and set the "VOLUME".**
7. **Press (MENU) until normal screen appears.**
8. **Press ( ) to put TV set into Standby mode.**
   - Power indicator will flash to indicate On Timer is set.
   - When the preset length of time setting has passed, the power turns on and a picture appears on the screen.
   - The ON TIMER speaker volume gradually increases from zero to preset volume.

[TV Set]



Power indicator (Flashing)

NOTE

- The Off timer is cancelled if the power is turned off or set to the Standby mode using ( ) on the remote control or (POWER) on the TV set, or if the power is otherwise interrupted.
- The On Timer is cancelled if the power is turned off using (POWER).
- If the TV set is turned on by the On Timer, then the TV set will be automatically turned off in two hours if no buttons are pressed on the TV set or remote control.

11/7/06, 5:44 PM

TIMER SETTING (Continued)

ler on-screen timer

now when a preset length of time has passed by displaying a countdown timer on . This is useful for timer cooking while you watch TV.

step 1 to 3 of OFF TIMER.

CH ^ / CH v to select "⧖".

◁+ / ◁- to set time.

um time that can be preset is 12 hours and 50 s.

ample at right shows that the Reminder will be ed after one hour and 50 minutes.

MENU until normal screen appears.

nutes before the preset length of time expires (in mple, after one hour and 45 minutes) and each thereafter, the remaining time appears on the for several seconds.

he preset length of time has passed, "⧖ 0:00" in red.

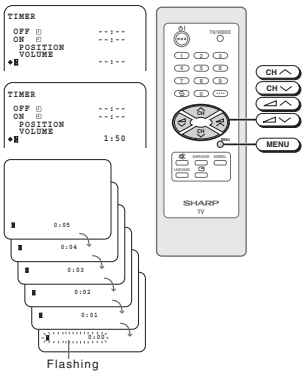

FEATURES

reen

ally turns the screen blue if a broadcast signal is not received.

MENU to call MENU screen.

CH ^ / CH v to select "FEATURE".

◁+ / ◁- to display FEATURE menu.

◁+ / ◁- to select "BLUE BACK" to "ON" or "OFF".

MENU until normal screen appears.

E BACK is set to "ON".

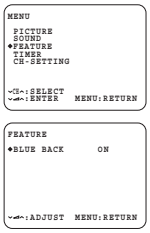



r also works in the Standby mode. Power is automatically turned on five minutes before the preset expires. The TV set automatically returns to the Standby mode approximately 1 minute after the timer buttons are pressed on the TV set or remote control.

r is cancelled if ⏻POWER on the TV set is pressed or if the power is otherwise interrupted.

n due to weak signals and too much noise may activate BLUE BACK, despite the presence of a nal. To continue watching TV under these conditions, switch "BLUE BACK" to "OFF".

er is set, the OFF TIMER setting has priority over BLUE BACK.

E11 USEFUL FEATURES

Channel / Timer display

Displays the current channel number, the timer, and other settings on the screen.

❶ Press ▭.
- The time remaining on the Off timer, On timer, and Reminder appears on the screen.
- When no timer is set, the channel number, colour and sound system appear on the screen.
- Press ▭ again to clear these current settings display on the screen.

❷ Press ▭ again, the channel number, colour and sound system appear on the screen.

❸ Press ▭ once again. The display disappears.



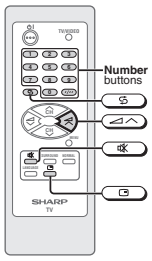

Mute

Silences the sound.

❶ Press 🔇.
- Press 🔇, "🔇" appears on the screen, and the sound is silenced.

❷ Press 🔇, the volume returns to its previous level.
- Mute will be cancelled if the ◁+ is pressed at any time.



Channel recall

Switches back to the channel you were watching just before the current channel.

Press ⟲.
- The channel previously viewed returns to the screen.

Example:
After switching from channel 5 to channel 7, ⟲ is pressed, the channel will change to channel 5. Press ⟲ again to return to channel 7.

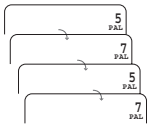

USEFUL FEATURES (Continued)

deo selection

etween TV broadcasts and AV input programmes.

ou press the TV/VIDEO, the input switches between programme.

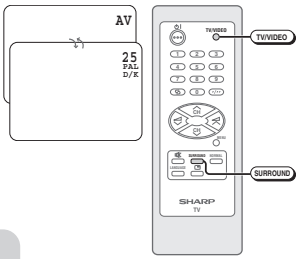

nd sound

a virtual surround sound from the TV's speakers.

ou press SURROUND, the mode changes
N, ON and OFF.

ces normal sound.

g to this mode during stereo signal reception ces a spacious sound, making the most of the ers' performance.

g to this mode during monaural signal reception es monaural sound that is similar to stereophonic .

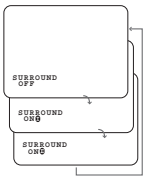

le is not working if BALANCE in the SOUND menu is adjusted and not in centre (0).
E8 Sound adjustment.

E12 TROUBLESHOOTING

The following problems do not always indicate a hardware failure. Therefore, please use the troubleshooting guide below before calling for repair service.
If, after following the guide none of the remedies work, unplug the TV set and call for service.

Quick Service Check List / Problems → Possible Causes/Remedies	Remote control does not work.	Bars on screen.	Picture distorted.	Picture rolls vertically.	No colour.	Poor reception on some channels.	Picture weak.	Picture lines or streaks.	Picture ghosting.	Picture blurred.	Sound OK, picture poor.	Picture OK, sound poor.	No picture or sound.
Try a new channel to check for possible station trouble.			●	●	●	●	●	●	●	●	●	●	●
TV not plugged in. Outlet power OFF.	●												●
⏻ **POWER** switch of TV not ON.	●												●
Antenna not connected to terminal at the back of the TV set.					●	●	●		●		●		●
If outside antenna is used, check for broken wires.		●	●	●	●	●	●	●	●	●	●		●
Check for local interference.		●		●		●		●	●		●	●	
Turn OFF using the ⏻ **POWER** switch, then turn ON again after a minute.	●												●
Adjust COLOUR control.					●		●				●		
Check batteries in the remote control.	●												
Try fine tuning to correct.			●		●		●			●	●		
Contrast setting in picture mode might be all the way to the minus side. Press the **NORMAL** button on the remote control to correct.											●		●
Increase the volume.												●	●

This unit is equipped with a microprocessor. Its performance could be adversely affected by external electrical noise or interference. If this should happen, unplug the unit and plug it in again after a few minutes.

26/12/06, 2:09 PM

SPECIFICATIONS

		21L-FG1BV / 21L-FG1SV
stem		World multi 18 system
casts/ back		PAL-I PAL-B/G PAL-D/K SECAM-B/G SECAM D/K, K1
back		NTSC 4.43/5.5 MHz/60 Hz NTSC 4.43/6.0 MHz/60 Hz NTSC 4.43/6.5 MHz/60 Hz NTSC 4.43/5.5 MHz/50 Hz NTSC 4.43/6.0 MHz/50 Hz NTSC 4.43/6.5 MHz/50 Hz SECAM-I (6.0 MHz)
back deo-in terminals)		SECAM-L (French SECAM) PAL 60 Hz NTSC 3.58 MHz
Player Playback F-in terminals)		PAL 5.5 MHz/60 Hz PAL 6.0 MHz/60 Hz PAL 6.5 MHz/60 Hz
annels		
B/G	VHF	E2–E12 ch
	UHF	E21–E69 ch
D/K, K1	VHF	C1–C12 ch, R1–R12 ch
	UHF	C13–C57 ch, R21–R69 ch
	VHF	B–J ch
	UHF	21–69 ch (Hong Kong)
		S1–S20 ch, S21–S41 ch (Hyper)
quency		48.25 MHz – 863.25 MHz
ng		100-Channel Electronic Tuner with Full Auto Tuning System
		21-Inch Flat CRT
		Audio/video input × 1 (rear), Audio/video output × 1 (rear)
t		3 W (RMS) × 2, total 6 W (RMS)
e		AC 110 – 240V, 50/60 Hz
mption		88 W
		625 (W) × 470 (H) × 498.5 (D) mm
		22 kg (Approx.)

pecifications are subject to change without notice.
stem: These receiving systems, encompassing all currently available technology, include those with
dcast, videotape and laserdisc hardware and software.

SHARP®

SHARP CORPORATION

10/7/06, 8:09 AM

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages